

# **Android TV BOX**

## ***User Manual***



### **Precautions before use**

To prevent fire, electronic shock and damage of product, please do not let the player come into contact with rain, moisture or liquid. Do not put vases or other water containers on the player.

To ensure good ventilation, please do not put the player in bookcases, cabinet or other confined places. Keep well-ventilated to prevent fire or electronic shock caused by overheat of the player. Keep lit candles and other lit subjects away from the player. Please do not open the case of the player. Only a specialist is allowed to do this.

### **Placement of unit Issues**

Please place the player on a flat area. Keep it away from sunlight and avoid heat, humidity and frequent shaking to avoid damage the case and other components of the player and shorten the service life of the player. For the best performance of the player, please do not place heavy objects on the player and keep it at least 6 inches away from the wall.

### **Power Issues**

Do not use over-voltage, otherwise the player would be damaged and might cause fire. Please connect the power cord correctly and make sure the cable is not damaged. In the United States, that means supplying 110 VAC to the device. Please unplug the power cord if you do not use the player for long time to prevent damage caused by lightning.

### **Cleaning Issues**

Please unplug the power cord before cleaning the player. Use a slightly wet rag to clean the player instead of liquid detergent. Do not use solvents like gas, because this might damage the case of the player.

### **Moisture Issues**

Please keep the player away from any humid places, like a basement. Condensation of moisture might cause damage to the player. In this case, please turn on the player and the heat of the player may drive the humidity away.

### **About the user manual**

Please read the user manual carefully and keep the manual in a safe place for review if necessary. The pictures in this user manual might be different with the pictures shown on the TV because of a difference in firmware

If any of the components needs to be replaced, please make sure only authorized components are used. Otherwise it might cause fire, electronic shock or other damages.

## Package Contents

Accessories	Quantity
Power adaptor	1
Remote contror	1
HD cable	1
User manual	1



Power : Press to ON/OFF



Menu: Press to choose function menu of corresponding application in video, music, photo and website.



Home : Fast key to go back to main menu



Return : Press to return back to previous menu.



VOL: Press to increase/decrease the volume.



Cursor: Press to use the navigation button as cursor.

 


Navigation: Press to navigate left/right/up/down. Press OK to confirm your choice.




### H96 Max Android 8.1 TV Box Installation:

1. Power on the TV Box (the Blue indicator light on), connect the TV with HDMI
2. Switch to the correct data source, enter the main interface
3. Set up wireless network or insert cable to connect wired network.
4. Open any TV or movie you want to see.

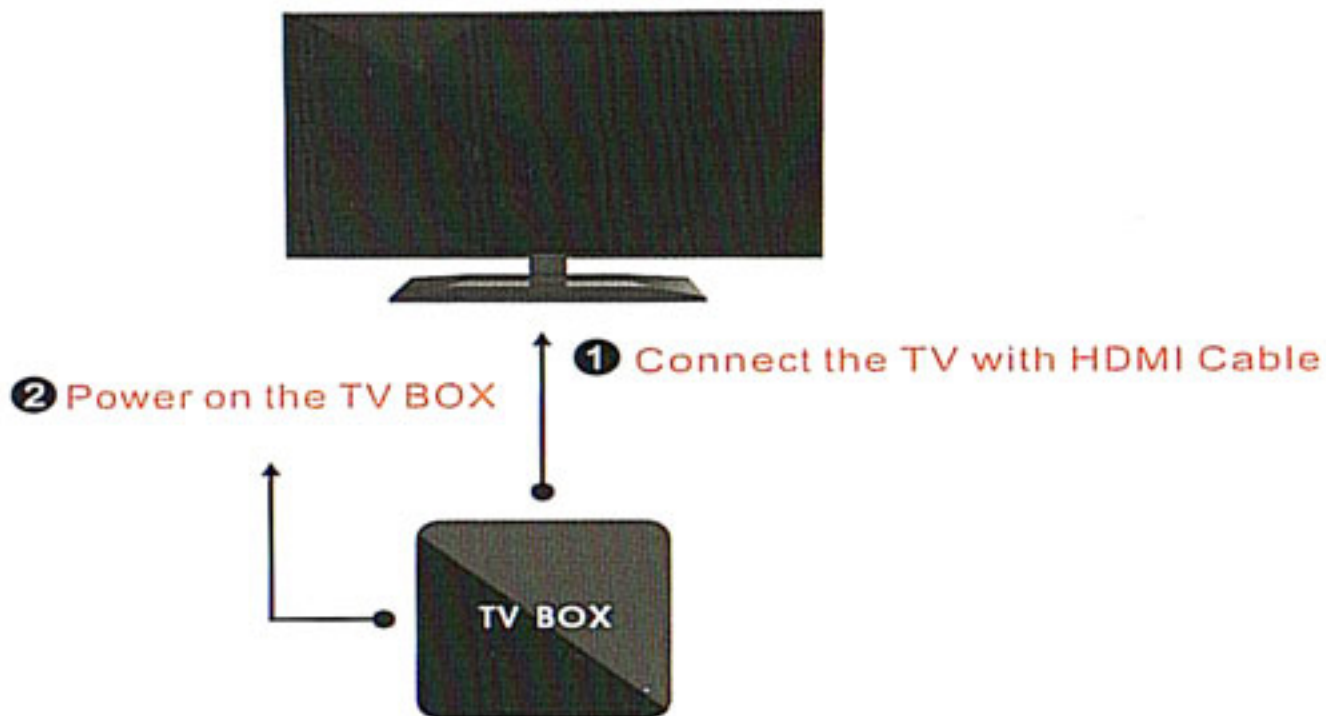


### Startup

 After turning on the power supply, the blue light is lit, about 20 seconds to enter the main interface.

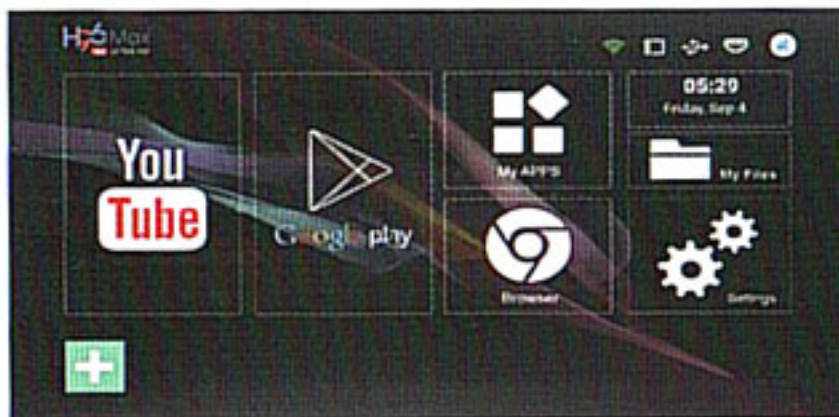


## Wi-Fi Setting

 Move to "Wi-Fi", turn on the Wi-Fi network from the upper right corner. System will start scanning available Wi-Fi networks around you automatically.

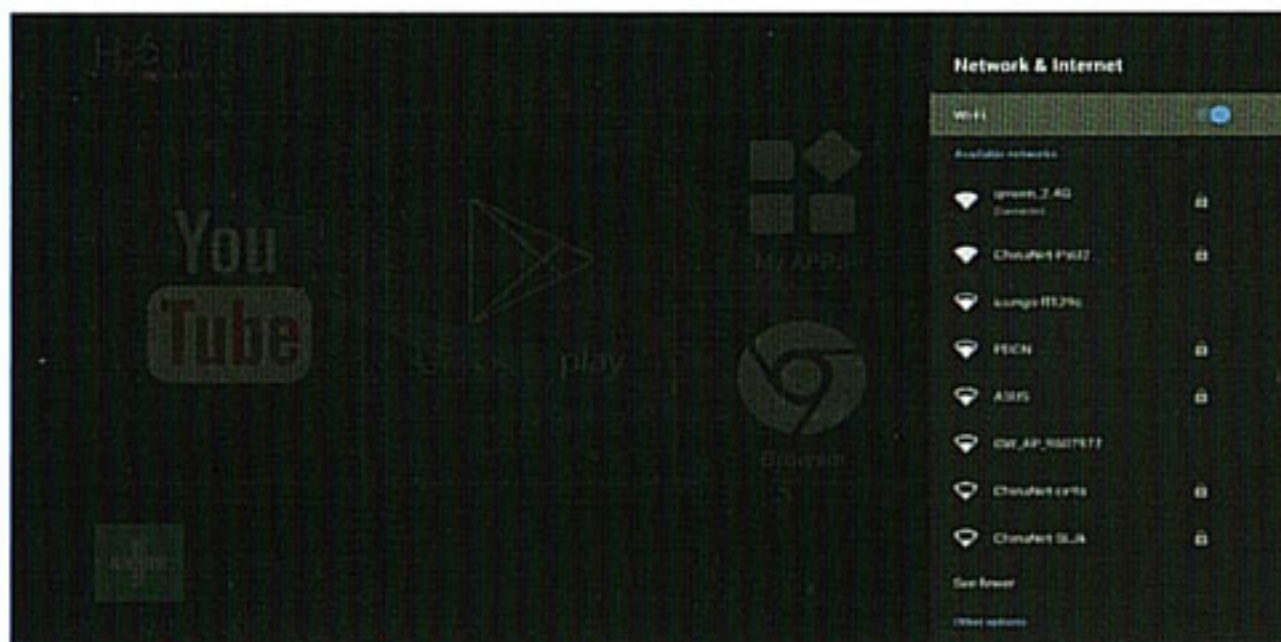

## HDTVOutput seting

 Display→Turn on "HDTV auto-detection" →Click "HDTV Output Mode Setting :1080-60hz", Then you can selection it as the second page.

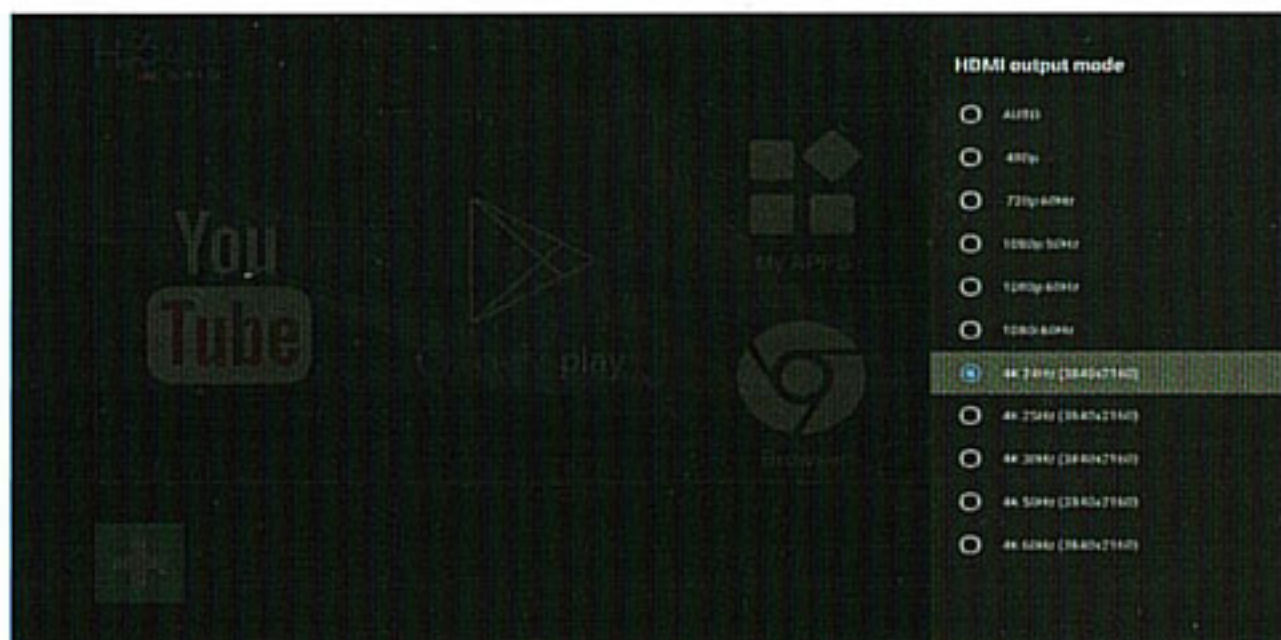




## APP install

Move to applistler, Press OK to enter in

You can install software by this appinstaller function. Please first download your desired software by apk formats form the computer to the USB. You will choose your desired device in order to scan the apks. Press OK to install your desired software.

 After the installation finished, the software icon will be shown on the applications menu.

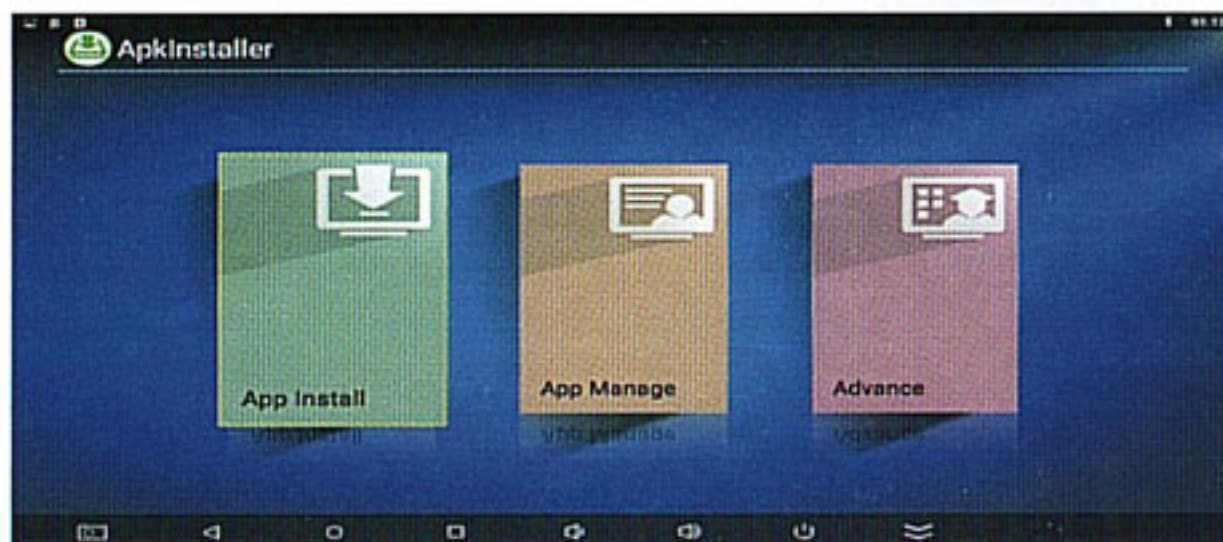

## My Apps

Move to my Apps, Press OK to enter in

You can see icons referring to different function on the picture



## Backup & reset

Move to "Backup & reset", press to enter into factory data reset. You can erase all data on the media box



### Warm Tips:

1. The remote of TV box not included batteries, please prepare two batteries by yourself.
2. Some apps in our system are not the latest version, you can update the version of the app that is right for you according to your habits or preferences.
3. The remote has two mode, and they are switched by the mouse mode button. Mouse mode requires long press of the arrow keys to move around the screen. Press the mouse mode button again to switch back. You also could connect mouse to move around the screen.

### 100% Satisfaction Guarantee:

Easy return policy and 100% satisfaction guarantee. 365 days product warranty, Gaia is committed to providing the best quality of products and the best services, if any quality problem or dissatisfied, please contact us firstly, we will try what we can do to solve your problem in first time.



## Backup & reset

Move to "Backup & reset", press to enter into factory data reset. You can erase all data on the media box



### Warm Tips:

1. The remote of TV box not included batteries, please prepare two batteries by yourself.
2. Some apps in our system are not the latest version, you can update the version of the app that is right for you according to your habits or preferences.
3. The remote has two mode, and they are switched by the mouse mode button. Mouse mode requires long press of the arrow keys to move around the screen. Press the mouse mode button again to switch back. You also could connect mouse to move around the screen.

### 100% Satisfaction Guarantee:

Easy return policy and 100% satisfaction guarantee. 365 days product warranty, Gaia is committed to providing the best quality of products and the best services, if any quality problem or dissatisfied, please contact us firstly, we will try what we can do to solve your problem in first time.



## Troubles hooting

### Warning

Under no circumstances should you try to repair the TV BOX by yourself, as this will invalidate the warranty. Do not open the as there is a risk of electric shock. TV BOX If a fault occurs, first check with points listed below before taking the TV BOX for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No power	<ul style="list-style-type: none"><li>-Check if the power adaptor is properly connected to the power and the TV BOX.</li><li>-Press the power on the remote controller to turn on the power.</li></ul>
No picture	<ul style="list-style-type: none"><li>-Re-connect with HDTV cable or YUV cable or AV cable.</li><li>-Check if the TV is switched on.</li></ul>
No sound or distorted sound	<ul style="list-style-type: none"><li>-Adjust the volume.</li><li>-Check that the speakers are connected correctly.</li></ul>
No audio or digital output	<ul style="list-style-type: none"><li>-Check the digital connections.</li><li>-Check if your amplifier is set correctly.</li></ul>
<p>The player does not respond to the Remote Control</p> <p>Player does not respond to some operating commands during playback</p>	<ul style="list-style-type: none"><li>-Aim the remote control directly at the sensor on the front of the TV BOX.</li><li>-Reduce the distance to the TV BOX.</li><li>-Replace the batteries in the remote control.</li><li>-Operations may not be permitted.Refer to the user manual.</li><li>- Possibility of system halted, re-insert with power adaptor to restart.</li></ul>
No sound during movies playback	<ul style="list-style-type: none"><li>-The audio codec may not be supported by the TV BOX.You can change to the supported audio on playing menu.</li><li>-Check the volume.</li></ul>
The contents of the USB flash drive cannot be read	<ul style="list-style-type: none"><li>-The USB flash drive format is not compatible with the box.</li><li>-If one of the USB can not be read, please turn off the TV BOX for 30 seconds and restart the TV BOX.</li></ul>
Slow operation of the USB flash drive	<ul style="list-style-type: none"><li>-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen.</li></ul>
No sound with HDTV connection	<ul style="list-style-type: none"><li>-Check the connection between the TV and the HDTV jack of box.</li><li>-Check your TV system setup .</li><li>-Check the volume.</li></ul>
The TV screen is blank and the player LED is blinking	<ul style="list-style-type: none"><li>-Turn off your TV BOX,wait 30 seconds,turn it on again.</li><li>-If under HDTV status, check if HDTV connection is correct or change another HDTV cable, set the output resolution of this TV BOX into 720p.</li></ul>